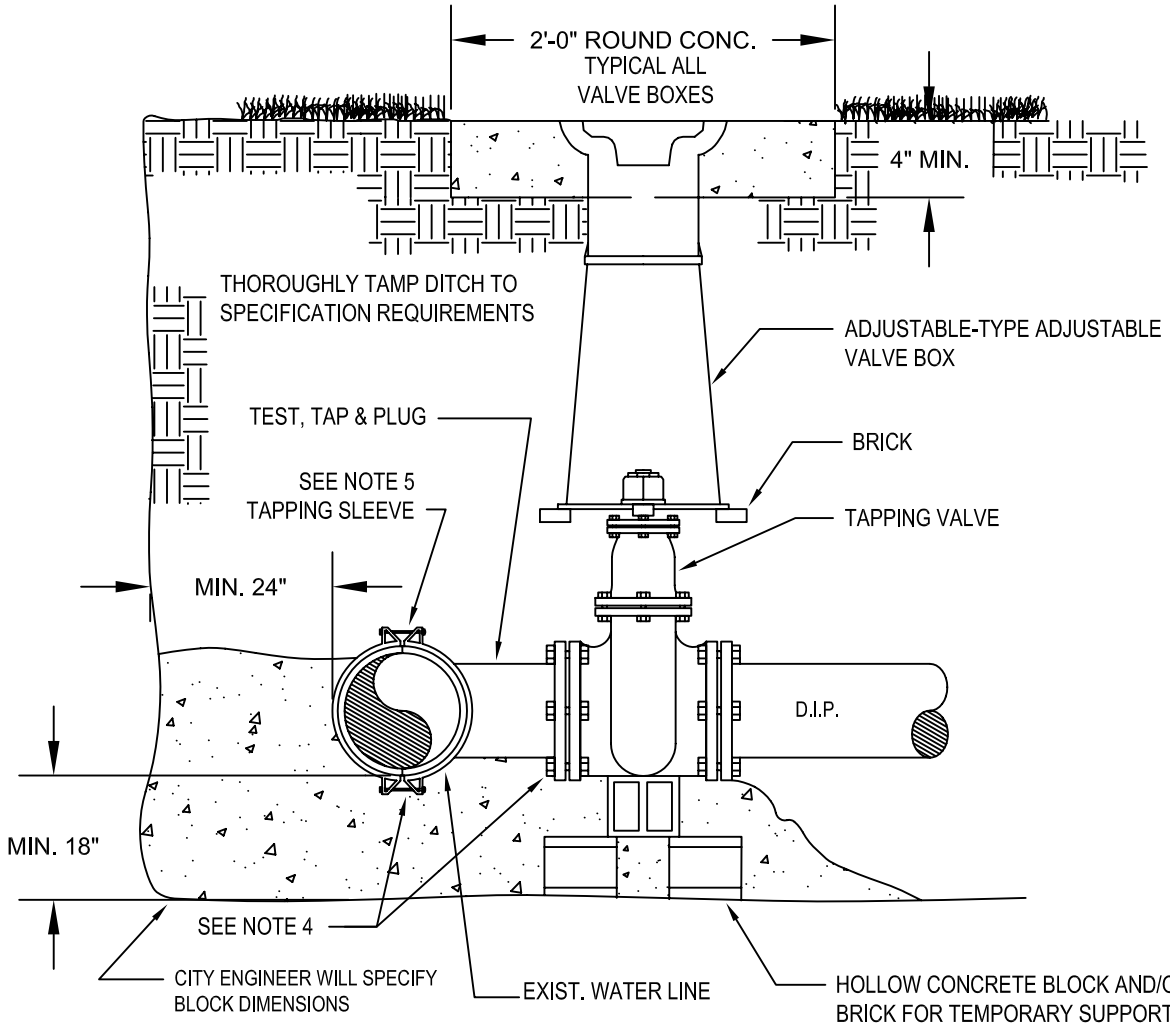

NOTES

1. TEMPORARILY SUPPORT TAPPING SADDLE AND VALVE AND APPLY STANDARD HYDROSTATIC TEST.

2. IF NO LEAKS, POUR INDICATED PERMANENT CONCRETE BLOCK AND SUPPORT PAD.

3. MAKE TAP, LINE EXTENSION AND BACKFILL.

4. COVER GLANDS AND BOLTS WITH HEAVY POLYETHYLENE SHEETING TO KEEP CONCRETE FROM BONDING. TYPICAL WHENEVER BOLTS OR GLANDS MAY BE "WRAPPED-UP" IN CONCRETE.

5. COAT TAPPING SLEEVE AND BOLTS WITH AN APPROVED BITUMASTIC COATING BEFORE POURING CONCRETE. TYPICAL FOR ALL STEEL INCLUDING RODS, COUPLINGS, STRAPS AND OTHER BURIED STEEL. SEE NOTE 5, DRAWING W-36 FOR COATING.

ALL TAPPING SLEEVES MUST BE APPROVED BY THE CITY OF CUMMING UTILITY INSPECTOR. PLEASE CALL FOR SPECIFICATIONS PRIOR TO ORDERING OR INSTALLATION. (770) 781-2025

REVISIONS

City of Cumming

Department of Utilities - Distribution and Collection Division

TAPPING SLEEVE AND VALVE INSTALLATION DETAILS

W-14